

GeoDry ^{Compact}

Dishwasher Drying Agent

RINSE AID FOR AUTOMATIC DISHWASHERS

DESCRIPTION

GeoDry is a machine dishwashing rinse aid containing a special blend of low foaming, non-ionic detergents and mild acids which ensure excellent wetting and draining properties and is effective in hard or soft water conditions.

GeoDry promotes rapid drying, is highly concentrated and economical to use.

APPLICATIONS (Usage Areas)

GeoDry is used in the rinse section of dishwashing machines or in dip tanks to prevent water spotting of cleaned dishes and flatware. It promotes efficient rinsing of articles after washing.

DIRECTIONS FOR USE

GeoDry must only be used with the GeoChem dosing equipment.

GeoDry is dosed during the rinse cycle at a rate determined by the GeoChem Technical representative allowing optimum efficiency and economy.

PRECAUTIONS

GeoDry contains surface-active agents.

- Avoid contact with skin and eyes.
- Wear impervious rubber gloves and safety goggles when using.
- Do not ingest product.

EMERGENCY TREATMENT

Skin contact: Flush immediately with soap and water, wash contaminated clothing. If irritation develops, seek medical advice.

Eye contact: Rinse immediately with plenty of water for 10 minutes with eyelids held wide open. Seek medical advice.

Inhalation: Move person to fresh air
Ingestion: Drink plenty of water or milk, Do not attempt to neutralize. Seek immediate medical attention.

STORAGE

Store in original container undercover in a cool dry place. Keep container tightly closed when not in use. Keep away from the reach of children.